 




**AIR TORQUE®**

## 3-х ПОЗИЦИОННЫЕ ПНЕВМАТИЧЕСКИЕ ПРИВОДЫ с углом 0° - 45° - 90°.

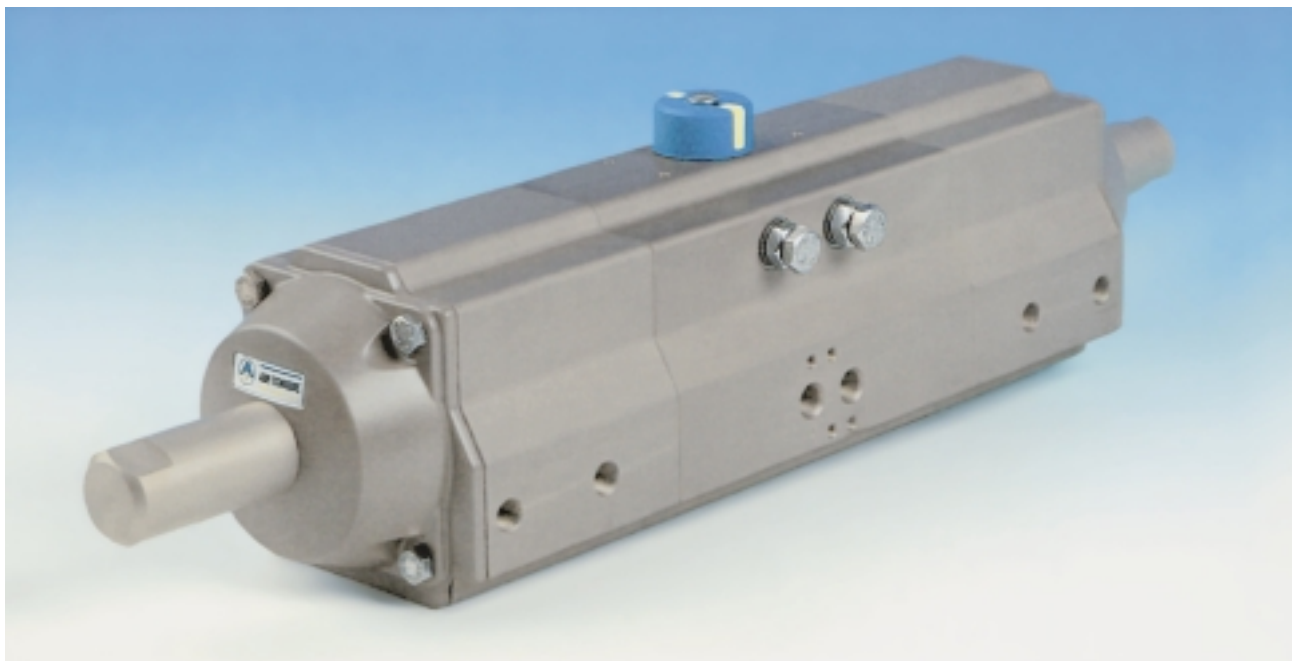

Архангельск (8182)63-90-72  
Астана (7172)727-132  
Астрахань (8512)99-46-04  
Барнаул (3852)73-04-60  
Белгород (4722)40-23-64  
Брянск (4832)59-03-52  
Владивосток (423)249-28-31  
Волгоград (844)278-03-48  
Вологда (8172)26-41-59  
Воронеж (473)204-51-73  
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06  
Ижевск (3412)26-03-58  
Иркутск (395)279-98-46  
Казань (843)206-01-48  
Калининград (4012)72-03-81  
Калуга (4842)92-23-67  
Кемерово (3842)65-04-62  
Киров (8332)68-02-04  
Краснодар (861)203-40-90  
Красноярск (391)204-63-61  
Курск (4712)77-13-04  
Липецк (4742)52-20-81

 
Магнитогорск (3519)55-03-13  
Москва (495)268-04-70  
Мурманск (8152)59-64-93  
Набережные Челны (8552)20-53-41  
Нижний Новгород (831)429-08-12  
Новокузнецк (3843)20-46-81  
Новосибирск (383)227-86-73  
Омск (3812)21-46-40  
Орел (4862)44-53-42  
Оренбург (3532)37-68-04  
Пенза (8412)22-31-16

Пермь (342)205-81-47  
Ростов-на-Дону (863)308-18-15  
Рязань (4912)46-61-64  
Самара (846)206-03-16  
Санкт-Петербург (812)309-46-40  
Саратов (845)249-38-78  
Севастополь (8692)22-31-93  
Симферополь (3652)67-13-56  
Смоленск (4812)29-41-54  
Сочи (862)225-72-31  
Ставрополь (8652)20-65-13

Сургут (3462)77-98-35  
Тверь (4822)63-31-35  
Томск (3822)98-41-53  
Тула (4872)74-02-29  
Тюмень (3452)66-21-18  
Ульяновск (8422)24-23-59  
Уфа (347)229-48-12  
Хабаровск (4212)92-98-04  
Челябинск (351)202-03-61  
Череповец (8202)49-02-64  
Ярославль (4852)69-52-93

Киргизия (996)312-96-26-47    Казахстан (772)734-952-31    Таджикистан (992)427-82-92-69

Единый адрес для всех регионов: [www.airtorque.nt-rt.ru](http://www.airtorque.nt-rt.ru) || [aqr@nt-rt.ru](mailto:aqr@nt-rt.ru)

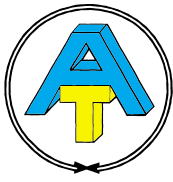

**AIR TORQUE**

 


## 3-POSITION 4th GENERATION ACTUATORS (90° Rotation)


AIR TORQUE 3 position pneumatic actuators provide an operation of 0° - 45° - 90°. The intermediate position is achieved by an external mechanical stop of movement on the 2 auxiliary pistons (for spring return actuators it may be only one auxiliary piston). This intermediate stop position is adjustable from 0° to 90°, for example 5°, 20°, 30°, 50°, 75° etc. The intermediate position is easily achieved by adjusting the external nuts located outside the two end-caps.

Both type, double acting and spring return, are available.

Field of application: For dosing, for exact filling and for any kind of services where on 90° rotation an intermediate stop position is desired.

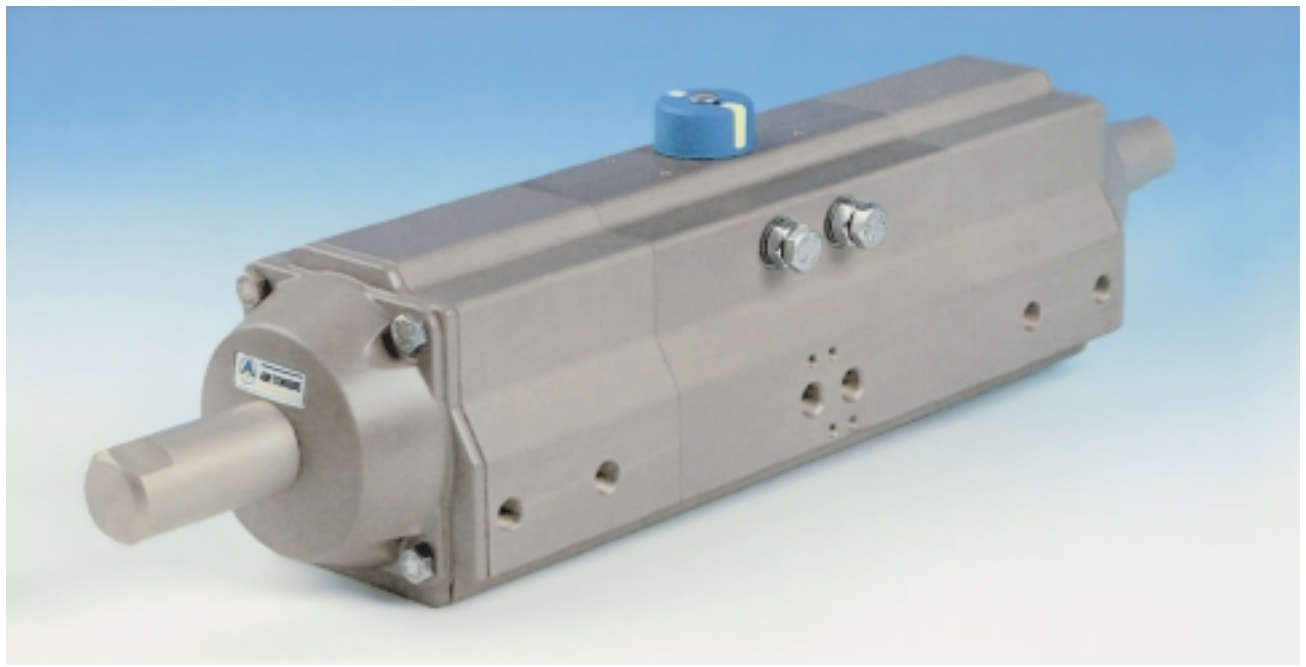


 In order to control the operation of AIR TORQUE 3-position pneumatic actuators a system of solenoid valves controlling a sequence of air supplies to the actuator is required as described below:

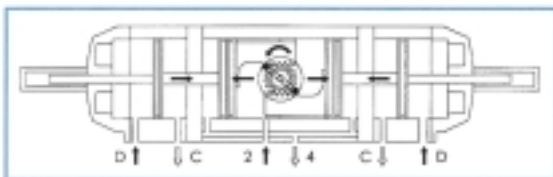


### Position 1 (Intermediate Position):

 This position is achieved when air is supplied simultaneously to ports 2 and D with exhaust air at ports 4 and C. In fact the air supplied at ports D forces the auxiliary pistons to the center and the rods serve as mechanical stops for the internal pistons stopping in the desired intermediate position.

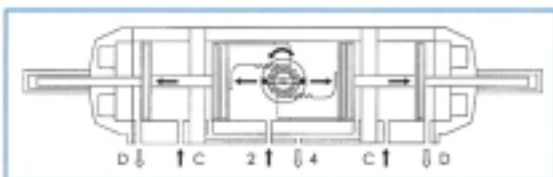

### Position 2 (Fully Open Position):

 This position is achieved when air supplied to port 2 and port C (Air to port C may also be avoided) with exhaust air at port 4. In this condition air to port 2 permits air to the internal pistons to continue the opening stroke.

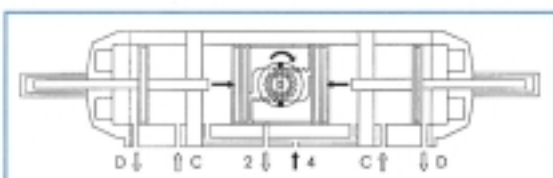

### Position 3 (Fully closed Position):

 
This position is achieved when air is supplied to port 4 with exhaust air at port 2.

When ordering 3-Position pneumatic actuators, add **"3P"** ( Ex. **3P** AT 300 D A F07 17 ) to the normal actuator code and specify the desired stop position including the intermediate e.g. 0° - 45° - 90°.





**AIR TORQUE®**

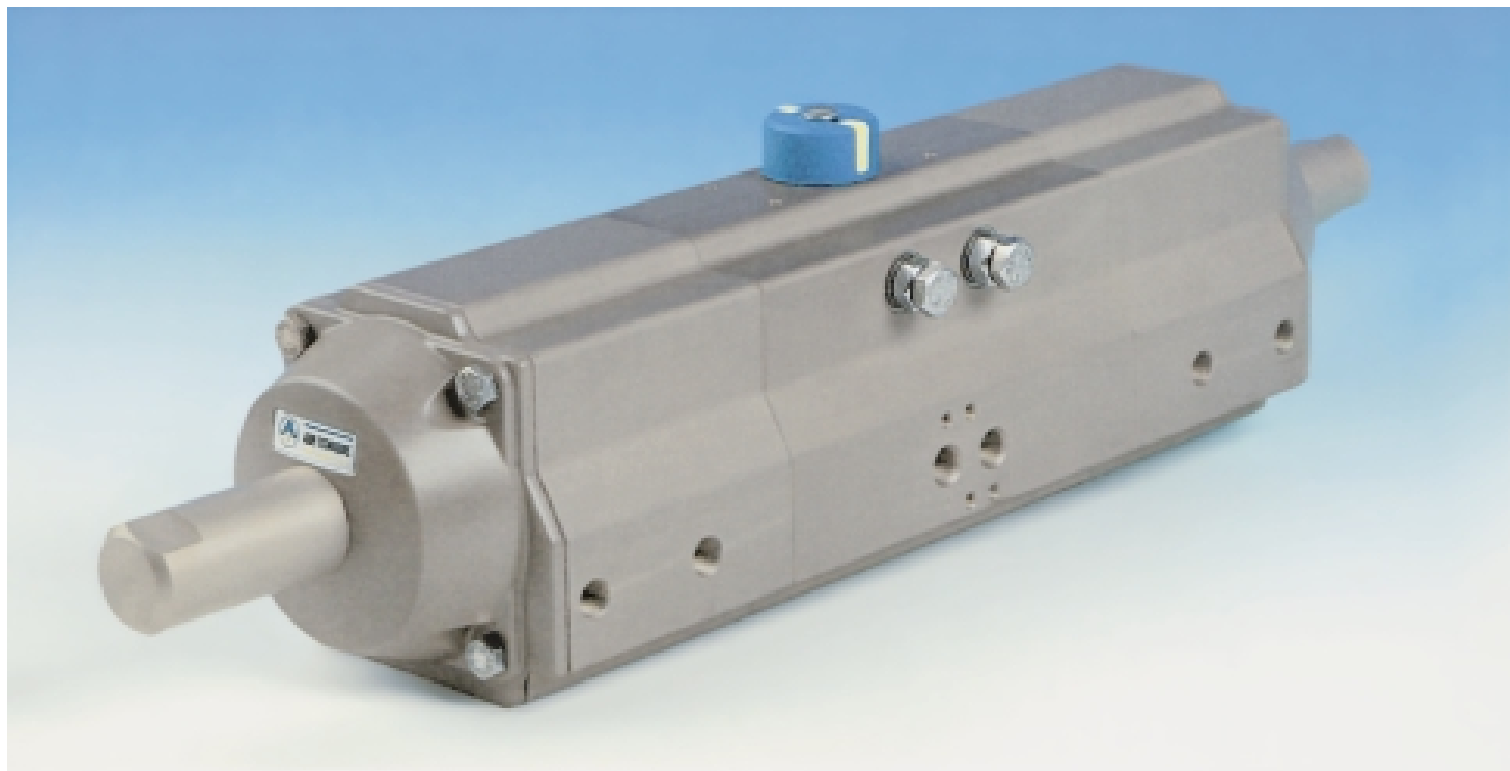

Архангельск (8182)63-90-72  
Астана (7172)727-132  
Астрахань (8512)99-46-04  
Барнаул (3852)73-04-60  
Белгород (4722)40-23-64  
Брянск (4832)59-03-52  
Владивосток (423)249-28-31  
Волгоград (844)278-03-48  
Вологда (8172)26-41-59  
Воронеж (473)204-51-73  
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06  
Ижевск (3412)26-03-58  
Иркутск (395)279-98-46  
Казань (843)206-01-48  
Калининград (4012)72-03-81  
Калуга (4842)92-23-67  
Кемерово (3842)65-04-62  
Киров (8332)68-02-04  
Краснодар (861)203-40-90  
Красноярск (391)204-63-61  
Курск (4712)77-13-04  
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13  
Москва (495)268-04-70  
Мурманск (8152)59-64-93  
Набережные Челны (8552)20-53-41  
Нижний Новгород (831)429-08-12  
Новокузнецк (3843)20-46-81  
Новосибирск (383)227-86-73  
Омск (3812)21-46-40  
Орел (4862)44-53-42  
Оренбург (3532)37-68-04  
Пенза (8412)22-31-16

Пермь (342)205-81-47  
Ростов-на-Дону (863)308-18-15  
Рязань (4912)46-61-64  
Самара (846)206-03-16  
Санкт-Петербург (812)309-46-40  
Саратов (845)249-38-78  
Севастополь (8692)22-31-93  
Симферополь (3652)67-13-56  
Смоленск (4812)29-41-54  
Сочи (862)225-72-31  
Ставрополь (8652)20-65-13

Сургут (3462)77-98-35  
Тверь (4822)63-31-35  
Томск (3822)98-41-53  
Тула (4872)74-02-29  
Тюмень (3452)66-21-18  
Ульяновск (8422)24-23-59  
Уфа (347)229-48-12  
Хабаровск (4212)92-98-04  
Челябинск (351)202-03-61  
Череповец (8202)49-02-64  
Ярославль (4852)69-52-93

Киргизия (996)312-96-26-47    Казахстан (772)734-952-31    Таджикистан (992)427-82-92-69

Единый адрес для всех регионов: [www.airtorque.nt-rt.ru](http://www.airtorque.nt-rt.ru) || [aqr@nt-rt.ru](mailto:aqr@nt-rt.ru)